

RENDERUSERLIGHTS System Variable — GstarCAD 2027

5886 kbadmin September 26, 2026 [Command Reference](#) 0 9

RENDERUSERLIGHTS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The RENDERUSERLIGHTS system variable is used to control whether to replace viewport light settings when rendering.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

Select one of the following way; keep the settings used in viewports and replace the DEFAULTLIGHTING for rendering.

System Variable Value:

- 0:** use the current light in viewport when rendering, or use default light or users lights, which is specified by DEFAULTLIGHTING system variable.
- 1:** replace settings of DEFAULTLIGHTING system variable. Only render users lights.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5886>