

REPORTERROR System Variable — GstarCAD 2027

5887 kbadmin September 26, 2026 [Command Reference](#) 0 17

REPORTERROR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The REPORTERROR system variable is used to control whether to send error report when program closes unexpectedly.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not display error report information and send a report
- 1:** display error report information and send a report

If specified REPROTERROR system variable to be 0 and the operation system supports sending error reports, users can send error reports by operation system.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5887>