

ROLLOVEROPACITY System Variable — GstarCAD 2027

5892 kbadmin September 26, 2026 [Command Reference](#) 0 8

ROLLOVEROPACITY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ROLLOVEROPACITY system variable is used to control the palettes opacity when cursor moving to it.

Type	Integer
Saved in	Registry
Initial value	100
Range	0 ~ 100

System Variable Value:

- 0:** completely transparency
 - 1:** completely opaque
- This system variable determines the default setting in the Transparency dialog box > Rollover section > How transparent should the palette be on mouse hover? option.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5892>