

SCREENSIZE System Variable — GstarCAD 2027

5913 kbadmin September 26, 2026 [Command Reference](#) 0 16

SCREENSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SCREENSIZE system variable is used to store the size(X and Y) of current viewport by pixels.
(Read-Only)

Type	2D point
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5913>