

SDI System Variable — GstarCAD 2027

SDI System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SDI system variable is used to control the program running on a single file interface or multiple file interfaces.
The SDI system variable can not be reset to 1 when multiple documents are already opened in the software.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** opens multiple file interfaces.
- 1:** opens a single file interface. And you will be prompted to save the current drawing, prior to opening or creating any other drawings.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5914>