

# SHOWHIST System Variable — GstarCAD 2027

5927 kbadmin September 26, 2026 [Command Reference](#) 0 8

## SHOWHIST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The SHOWHIST system variable is used to control the Show History property for solids in a drawing.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 1       |
| Range         | 0,1,2   |

### System Variable Value:

- 0:** set the "Show History" property of all solids to be no(Read only). Replace settings of "Show History" property of all solids. Users can not view original objects for creating solids.
- 1:** do not replace settings of "Show History" property of all solids.
- 2:** display all solids history by replacing settings of "Show History" property of all solids.Users can view original objects for creating solids.

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5927>