

SHPNAME System Variable — GstarCAD 2027

5931 kbadmin September 26, 2026 [Command Reference](#) 0 17

SHPNAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SHPNAME system variable is used to set the default shape name which must conform to symbol-naming conventions.

Type	Strings
Saved in	Not saved
Initial value	""

If no specified value, returns "".
Enter a period "." to specify no default value.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5931>