

SKETCHINC System Variable — GstarCAD 2027

5933 kbadmin September 26, 2026 [Command Reference](#) 0 9

SKETCHINC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SKETCHINC system variable is used to set the record increment for SKETCH command.

Type	Integer
Saved in	Drawing
Initial value	0.1000(Imperial) or 1.0000(Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5933>