

SNAPUNIT — GstarCAD 2027

SNAPUNIT

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SNAPUNIT system variable is used to set the snap space for current viewport.

Type	2D point
Saved in	Drawing
Initial value	0.5000,0.5000(Imperial) or 10.0000,10.0000(Metirc)

If specified SNAPSTYL to be 1, the X value of SNAPUNIT will be automatically adjusted to fit isometric snap.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)