

SOLIDCHECK System Variable — GstarCAD 2027

5948 kbadmin September 26, 2026 [Command Reference](#) 0 9

SOLIDCHECK System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SOLIDCHECK system variable is used to open or close 3D solid check for current task.

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0: close
- 1: open

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5948>