

SPLINETYPE System Variable — GstarCAD 2027

5954 kbadmin September 26, 2026 [Command Reference](#) 0 23

SPLINETYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SPLINETYPE system variable is used to set the curve type generated by Spline option of PEDIT command.

Type	Integer
Saved in	Drawing
Initial value	6
Range	5,6

System Variable Value:

- 5: quadratic B-spline
- 6: cubic B-spline

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5954>