

SSMSTATE System Variable — GstarCAD 2027

SSMSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SSMSTATE system variable is used to control the state of Sheet Set Manager window is open or closed.
(Read only)

Type	Integer
Saved in	Not saved
Initial value	Unknown
Range	0,1

System Variable Value:

- 0:closed
- 1: open

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)