

STARTUP System Variable — GstarCAD 2027

STARTUP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The STARTUP system variable is used to control the display content when starting applications or opening new drawings.

Type	Integer
Saved in	Registry
Initial value	3
Range	0,1,2,3

This system variable control whether to display Create New Drawing dialog box when using NEW or QNEW command to create new drawings. It also controls whether to display Startup dialog box when starting applications.
Specifying FILEDIA system variable to be 0, file dialog boxes are not displayed.

System Variable Value:

- 0:start a drawing without defining settings
- 1:display Startup or Create New Drawing dialog box
- 2:display a new tab. If this tab is available in applications, display custom dialog box.
- 3:display a new tab and pre-load ribbon when opening or creating a drawing.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5962>