

STEPSPERSEC System Variable — GstarCAD 2027

5965 kbadmin September 26, 2026 [Command Reference](#) 0 18

STEPSPERSEC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The STEPSERSEC system variable is used to specify how many steps per second executing in walk or fly mode.

Type	Real
Saved in	Drawing
Initial value	2.0000
Range	1 ~ 30

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5965>