

SURFACEAUTOTRIM System Variable — GstarCAD 2027

5968 kbadmin September 26, 2026 [Command Reference](#) 0 10

SURFACEAUTOTRIM System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SURFACEAUTOTRIM system variable is used to set whether to auto trim surface when geometry projecting to surface.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** do not trim surface when geometry projecting to surface.
- 1:** auto trim surface when geometry projecting to surface

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5968>