

SURFTYPE System Variable — GstarCAD 2027

SURFTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SURFTYPE system variable is used to control the type of surface-fitting to be performed by the Smooth option of PEDIT command.

Type	Integer
Saved in	Drawing
Initial value	6
Range	5,6,8

System Variable Value:

- 5: quadratic B-spline surface
- 6: cubic B-spline surface
- 8: bezier surface

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)