

SURFU System Variable — GstarCAD 2027

5972 kbadmin September 26, 2026 [Command Reference](#) 0 4

SURFU System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The SURFU system variable is used to set the surface density in M direction for PEDIT Smooth option and the U isolines density on surface objects.

Type	Integer
Saved in	Drawing
Initial value	6
Range	0 ~ 200

Meshes are always created with the smallest density of 2.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5972>