

TABLEINDICATOR System Variable — GstarCAD 2027

6033 kbadmin September 26, 2026 [Command Reference](#) 0 6

TABLEINDICATOR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TABLEINDICATOR system variable is used to control the display of row number and column letter when opening in-place text editor to edit table units.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0: off
- 1: on

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6033>