

# TEXTQLTY System Variable — GstarCAD 2027

6050 kbadmin September 26, 2026 [Command Reference](#) 0 7

## TEXTQLTY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The TEXTQLTY system variable is used to set the resolutions of TureType text when plotting and rendering.

|               |           |
|---------------|-----------|
| Type          | Integer   |
| Saved in      | Not saved |
| Initial value | 50        |
| Range         | 0 ~ 100   |

A smaller value will decrease text smoothness, but it can increase speed.  
A larger value can increase text smoothness, but it can decrease speed.

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6050>