

TEXTSIZE System Variable — GstarCAD 2027

6051 kbadmin September 26, 2026 [Command Reference](#) 0 10

TEXTSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TEXTSIZE system variable is used to set the default text height for new created text objects.

Type	Real
Saved in	Drawing
Initial value	Real 0.2000(Imperial) or 2.5000(Metric)

The TEXTSIZE will be not available if there is a fixed text height in current text style.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6051>