

TEXTSTYLE System Variable — GstarCAD 2027

6052 kbadmin September 26, 2026 [Command Reference](#) 0 7

TEXTSTYLE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TEXTSTYLE system variable is used to set the name for current text style.

Type	Strings
Saved in	Drawing
Initial value	Standard

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6052>