

TRACEWID System Variable — GstarCAD 2027

6060 kbadmin September 26, 2026 [Command Reference](#) 0 19

TRACEWID System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TRACEWID system variable is used to set the default lineweight for wide line.

Type	Integer
Saved in	Drawing
Initial value	0.0500(Imperial) or 1.0000(Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6060>