

TRANSPARENCYDISPLAY System Variable — GstarCAD 2027

6062 kbadmin September 26, 2026 [Command Reference](#) 0 10

TRANSPARENCYDISPLAY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TRANSPARENCYDISPLAY system variable is used to control whether to display object transparency.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:do not display object transparency
- 1:display object transparency

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)