

TREEMAX System Variable — GstarCAD 2027

6067 kbadmin September 26, 2026 [Command Reference](#) 0 12

TREEMAX System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TREEMAX system variable is used to limit regenerating drawing memory by limiting the number of nodes in the spatial index(oct-tree).

Type	Integer
Saved in	Registry
Initial value	10000000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6067>