

TSTACKSIZE System Variable — GstarCAD 2027

6072 kbadmin September 26, 2026 [Command Reference](#) 0 11

TSTACKSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The TSTACKSIZE system variable is used to control the height of fraction of stack text relative to the current height percentage of selected text.

Type	Integer
Saved in	Drawing
Initial value	70
Range	25 ~ 125

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6072>