

To Change the Display for Interference Checking — GstarCAD 2027

6118 kbadmin September 26, 2026 [Command Reference](#) 0 18

To Change the Display for Interference Checking

[GstarCAD 2027](#) · [Command Reference](#)

To Change the Display for Interference Checking

1. Click Modify > 3D Operations > Interference Checking on the main menu.
2. Enter S at the command prompt.
3. The Interference Settings dialog box is displayed, in which you can change any of the settings and click OK.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6118>