

To Change the Thickness of Existing Objects — GstarCAD 2027

6123 kbadmin September 26, 2026 [Command Reference](#) 0 17

To Change the Thickness of Existing Objects

[GstarCAD 2027](#) · [Command Reference](#)

To Change the Thickness of Existing Objects

1. Select the objects whose thickness you want to change.
2. Click Modify > Properties on the main menu.
3. The Properties palette is displayed, under General tab, enter the value for Thickness.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6123>