

To Find the Distance and Angle Between Two Points — GstarCAD 2027

6237 kbadmin September 26, 2026 [Command Reference](#) 0 12

To Find the Distance and Angle Between Two Points

[GstarCAD 2027](#) · [Command Reference](#)

To Find the Distance and Angle Between Two Points

1. Click Tools > Inquiry > Distance on the main menu.
2. Specify the first point and the second point. The measurements are shown in the command window. If necessary, press F2 to expand the command window.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6237>