

To Lock the Scale of a Layout Viewport — GstarCAD 2027

6258 kbadmin September 26, 2026 [Command Reference](#) 0 10

To Lock the Scale of a Layout Viewport

[GstarCAD 2027](#) · [Command Reference](#)

To Lock the Scale of a Layout Viewport

1. Select the border of a layout viewport.
2. Right click and choose Display Locked > Yes.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6258>