

To Modify Single-Line Text — GstarCAD 2027

6266 kbadmin September 26, 2026 [Command Reference](#) 0 12

To Modify Single-Line Text

[GstarCAD 2027](#) · [Command Reference](#)

To Edit Single-line Text

1. Double-click a single-line text object.
2. In the In-Place Text Editor, enter the new text.
3. Press Enter.

To Change Single-Line Text Properties

1. Select a single-line text object.
2. Right-click the selected object and select Properties.
3. The Properties palette is displayed, you can enter any new text, and then change formatting and other properties as needed.

To Move, Scale and Rotate Text

1. Select a single-line text object to display the grips.
2. You can do one of the following:

- Select the grip and drag the text object to the new location.
- Select a grip, right-click and select Scale. Drag the mouse to define the scale or enter a scale.
- Select the grip you want to use as the rotation origin, right-click and select Rotate. Drag the mouse to define the rotation or enter an angle.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6266>