

To Modify the Live Section Display Settings — GstarCAD 2027

6269 kbadmin September 26, 2026 [Command Reference](#) 0 9

To Modify the Live Section Display Settings

[GstarCAD 2027](#) · [Command Reference](#)

To Modify the Live Section Display Settings

1. Click 3D tab > Section panel > Section Plane Settings in the ribbon.
2. The Section Settings dialog box is displayed, click Live Section Settings.
3. Modify the sections that you want to change and click OK.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6269>