

To Return Dimension Text to Its Original Location — GstarCAD 2027

6302 kbadmin September 26, 2026 [Command Reference](#) 0 12

To Return Dimension Text to Its Original Location

[GstarCAD 2027](#) · [Command Reference](#)

To Return Dimension Text to Its Original Location

1. Select the dimension text you want to return to its original location.
2. Hover over the text grip and click Reset Text Position.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6302>