

To Turn Live Sectioning On or Off — GstarCAD 2027

6334 kbadmin September 26, 2026 [Command Reference](#) 0 20

To Turn Live Sectioning On or Off

[GstarCAD 2027](#) · [Command Reference](#)

To Turn Live Sectioning On or Off

1. Select the section object.
2. Click 3D tab > Section panel > Live Section in the ribbon.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6334>