

UCSBASE System Variable — GstarCAD 2027

6375 kbadmin September 26, 2026 [Command Reference](#) 0 10

UCSBASE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The UCSBASE system variable is used to store the the name of UCS that defined the original point and direction for ortho UCS settings.

Type	Strings
Saved in	Drawing
Initial value	""

The valid value can be any named UCS..

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6375>