

UCSNAME System Variable — GstarCAD 2027

6379 kbadmin September 26, 2026 [Command Reference](#) 0 10

UCSNAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The UCSNAME system variable is used to store the current users coordinate name in current viewport of current space.
(Read-Only)

Type	Strings
Saved in	Drawing

If the current UCS has not been named, it returns a null character string.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6379>