

UCSVP System Variable — GstarCAD 2027

6383 kbadmin September 26, 2026 [Command Reference](#) 0 9

UCSVP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The UCSVP system variable is used to determine whether the UCS in other viewport is dependent or independent of UCS in current viewport.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** unlocked; the UCS reflects the current UCS of current viewport
- 1:** lock; the UCS stores in viewport and independent of the UCS of the current viewport

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6383>