

UCSXDIR System Variable — GstarCAD 2027

6384 kbadmin September 26, 2026 [Command Reference](#) 0 23

UCSXDIR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The UCSXDIR system variable is used to store the X direction of current UCS in current viewport of current space.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	0.0000,1.0000,0.0000

The X direction of UCS can be different for each viewport.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6384>