

UNDOMARKS System Variable — GstarCAD 2027

6387 kbadmin September 26, 2026 [Command Reference](#) 0 20

UNDOMARKS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The UNDOMARKS system variable is used to display the mark number placed in UNDO control stream.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0

If one group is currently active, the Mark and Back options are disabled.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6387>