

USERI1-USERI5 System Variable — GstarCAD 2027

6391 kbadmin September 26, 2026 [Command Reference](#) 0 16

USERI1-USERI5 System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Type	Integer
Saved-in	Drawing
Initial value	0
Range	-32768 to 32767

Provides storage and retrieval of integer values. There are five system variables: USERI1, USERI2, USERI3, USERI4, and USERI5.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6391>