

VIEWCTR System Variable — GstarCAD 2027

6401 kbadmin September 26, 2026 [Command Reference](#) 0 10

VIEWCTR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VIEWCTR system variable is used to store the center of view in current viewport.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	Unknown

It is expressed by UCS coordinates.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6401>