

VIEWDIR System Variable — GstarCAD 2027

6402 kbadmin September 26, 2026 [Command Reference](#) 0 15

VIEWDIR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VIEWDIR system variable is used to store the view direction by UCS coordinates in current viewport.
(Read-Only)

Type	3D vector
Saved in	Drawing
Initial value	0.0000,0.0000,1.0000

It describes the camera point as the 3D offset value of target point.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6402>