

# VPLAYEROVERRIDESMODE System Variable — GstarCAD 2027

6407 kbadmin September 26, 2026 [Command Reference](#) 0 11

## VPLAYEROVERRIDESMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The VPLAYEROVERRIDESMODE system variable is used to control whether to display and plot Layer Property Override in viewport of layout.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 1        |
| Range         | 0,1      |

### System Variable Value:

- 0:** do not display and plot Layer Property Override in viewport of layout  
**1:**display and plot Layer Property Override in viewport of layout

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6407>