

VPMAXIMIZEDSTATE System Variable — GstarCAD 2027

6408 kbadmin September 26, 2026 [Command Reference](#) 0 11

VPMAXIMIZEDSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VPMAXIMIZEDSTATE system variable is used to specify whether to maximize the viewport.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

If started PLOT command, the viewport maximization will be canceled.

System Variable Value:

- 0:** do not maximize
- 1:** maximize

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6408>