

VSEEDGECOLOR System Variable — GstarCAD 2027

6410 kbadmin September 26, 2026 [Command Reference](#) 0 10

VSEEDGECOLOR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VSEEDGECOLOR system variable is used to control the color of the edge in a visual style in the current viewport. To update the current drawing, you need to enter the REGEN command after you reset the system variable.

Type	String
Saved in	Drawing
Initial value	BYENTITY

System Variable Value:

- 0: BYBLOCK
- 1-255: INDEX COLOR
- 256: BYLAYER
- 257: BYENTITY
- RGB: 000,000,000: TRUE COLOR

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6410>