

VSMIN System Variable — GstarCAD 2027

6415 kbadmin September 26, 2026 [Command Reference](#) 0 12

VSMIN System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VSMIN system variable is used to store the bottom-left on the virtual screen of current viewport.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	Unknown

This value is expressed by UCS coordinates.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6415>