

VSSTATE System Variable — GstarCAD 2027

6419 kbadmin September 26, 2026 [Command Reference](#) 0 9

VSSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VSSTATE system variable is used to indicate whether the Visual Style window is open or closed.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6419>