

VTDURATION System Variable — GstarCAD 2027

6420 kbadmin September 26, 2026 [Command Reference](#) 0 15

VTDURATION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The VTDURATION system variable is used to set the duration of a smooth view transition in milliseconds.

Type	Integer
Saved in	Registry
Initial value	750
Range	0 ~ 5000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6420>