

WHIPARC System Variable — GstarCAD 2027

6425 kbadmin September 26, 2026 [Command Reference](#) 0 18

WHIPARC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The WHIPARC system variable is used to override the displayed smoothing of circles and arcs.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

0:the curved objects will display as a serial vectors controlled by the VIEWRES setting(Recommended)
1: the circle, arc, and polyline arc segments with continuous linetype will display as real circles and arcs
Note: this is a experience setting for testing memory usage and displaying performance of circles and arcs. Setting VIEWRES to be 1000 or higher always achieves a better result.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6425>