

WINDOWAREACOLOR System Variable — GstarCAD 2027

6427 kbadmin September 26, 2026 [Command Reference](#) 0 9

WINDOWAREACOLOR System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The WINDOWAREACOLOR system variable is used to control the color of transparency selection area when window selecting.

Type	Integer
Saved in	Registry
Initial value	150
Range	1 ~ 255

The SELECTIONAREA system variable should be turned on to display colors.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6427>