

WIPEOUTFRAME System Variable — GstarCAD 2027

6428 kbadmin September 26, 2026 [Command Reference](#) 0 9

WIPEOUTFRAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The WIPEOUTFRAME system variable is used to control whether to display and plot the frame of the wipeout objects.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1,2

System Variable Value:

- 0: do not display and plot the frame.
- 1: display and plot the frame.
- 2: display but do not plot the frame.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)